



Make It Yours.

MASTERCASE SL600M

User manual / English

عربي / التثبيت دليل

Инструкция за експлоатация / Български

安装说明 / 简体中文

安裝說明 / 繁體中文

Užívateľská príručka / Čeština

Handuch / Deutsch

Εγχειρίδιο χρήσης / Ελληνικά

Manual de Usuario / Español

Manuel de l'utilisateur / Français

Felhasználói kézikönyv / Magyar

فارسی / راهنمای کاربری

Manuale d'uso / Italiano

ユーザーズマニュアル / 日本語

Handleiding / Nederlands

설치 안내 / 한국어

Instrukcja Użytkownika / Polski

Manual do Usuário / Português











Руководство пользователя / русский

Uputstvo za korišćenje / Srpski

 
Kullanım Kılavuzu / Türkçe

Panduan Pengguna / Bahasa Indonesia

1. PACKAGE CONTENT




Item	Pics	Name	Q'ty	Used for
01		Ø5*10 Screw	12	Installing fans
02		#6-32*29 Screw	8	Installing 200mm fans on top
03		Stand-off Socket	1	Installing and removing stand-offs
04		Stand-off	3	Motherboard installation
05		#6-32*6 Screw	16	PSU / Motherboard Tray
06		Cable Tie	10	Cable Management
07		Cleaning Cloth	1	Cleaning Glass
08		SSD Screw	24	Mounting SSDs and HDDs on combo bracket
09		HDD Screw	16	HDD mounting on combo bracket
10		USB Cable	1	Connect to motherboard for Firmware update

2. FRONT I/O & BUTTONS

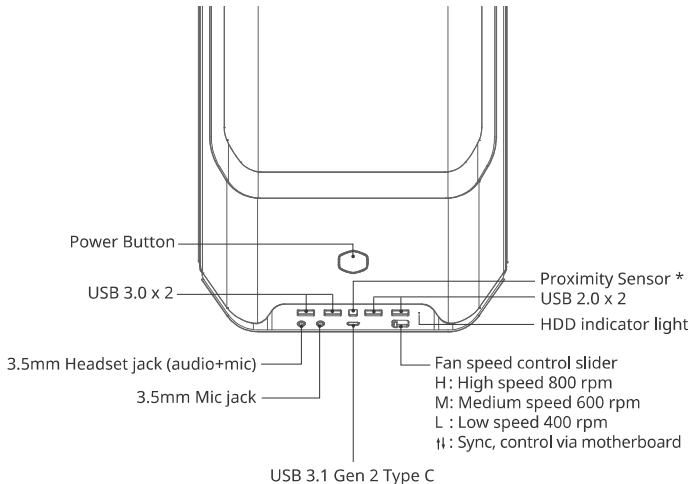


★ Sensing distance can vary depending on environmental factors like temperature, to disable the proximity sensor, please download the software tool from our website.

   3. COMPATIBILITY

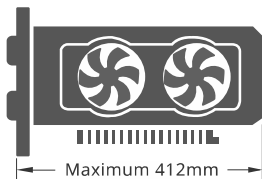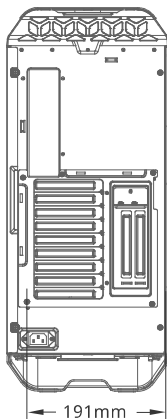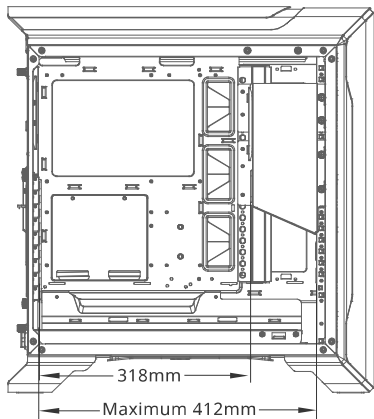


4. MOTHERBOARD INSTALLATION

 
1

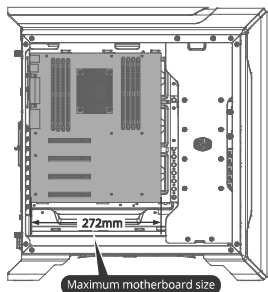


2

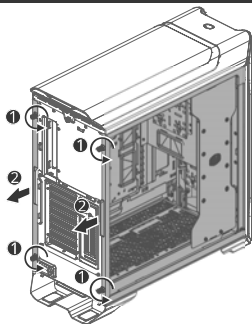 







3

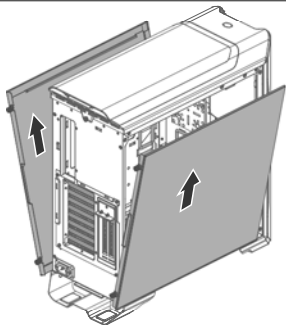 


4

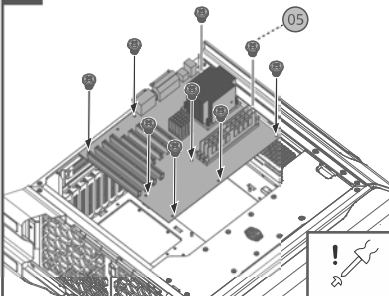 

      
5. POWER SUPPLY INSTALLATION

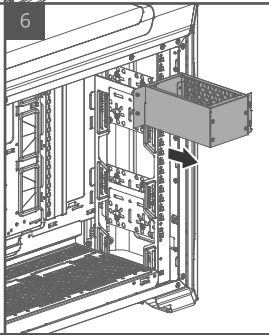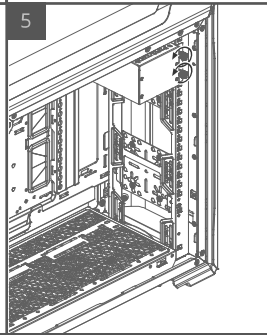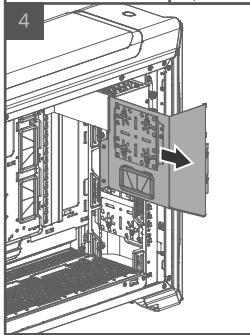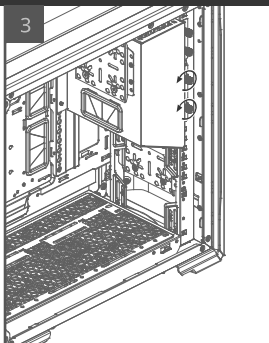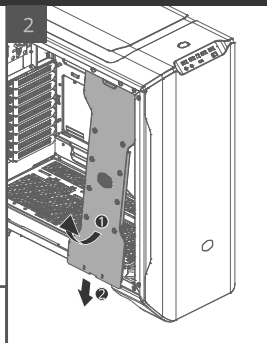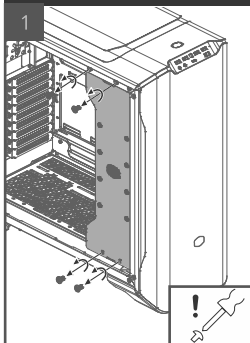


7

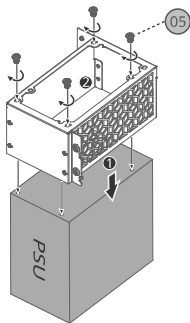 


8



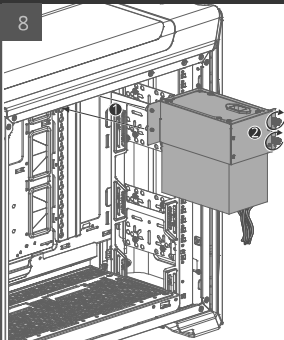 


9A

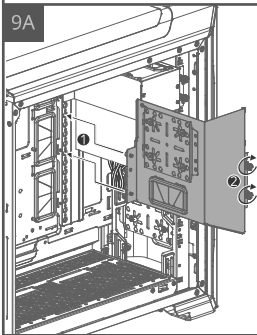 


9B

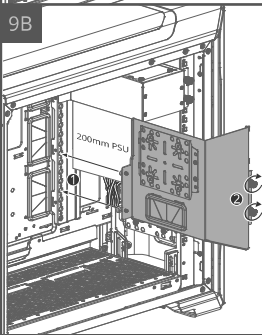 

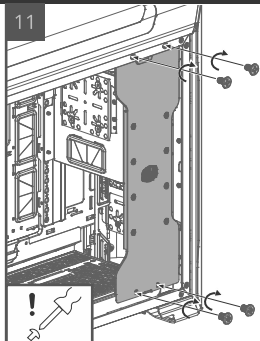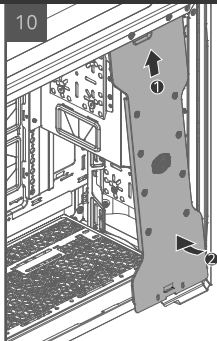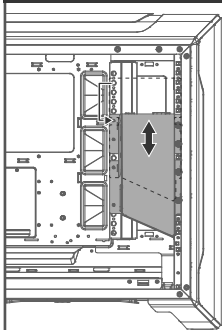   


6. SSD INSTALLATION

 
A1

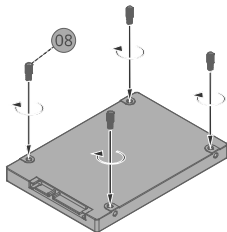

A2a

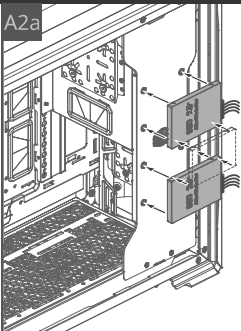 


A2b

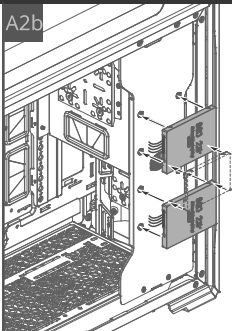 


B1

 
Using SSD pocket

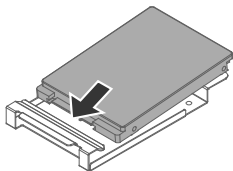


B2

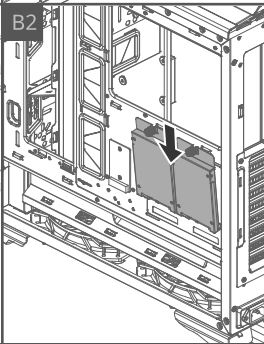 


B3

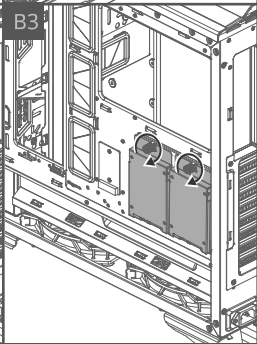 


C1

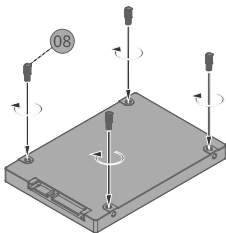 


C2a

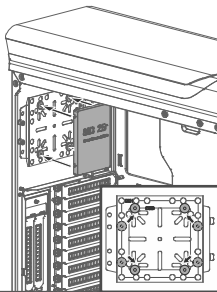 


C2b

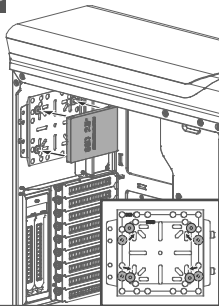 


D1






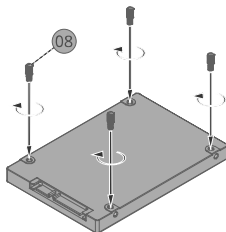 


D2a

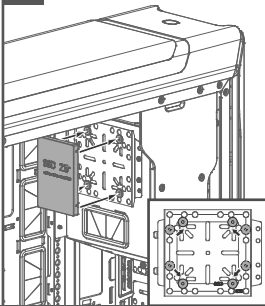 


D2b

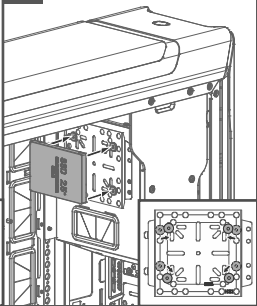 

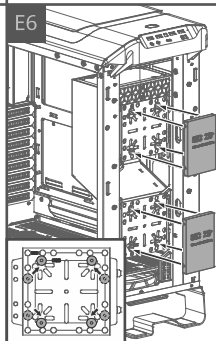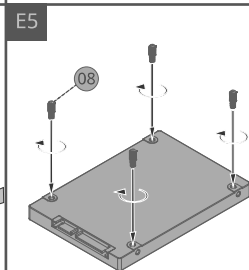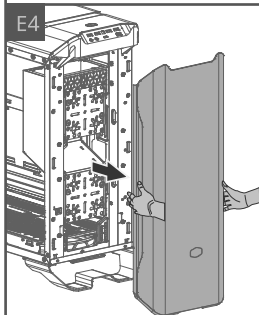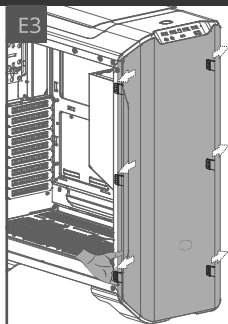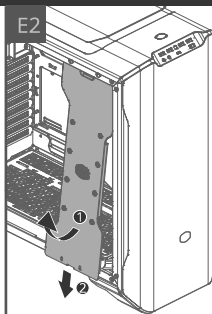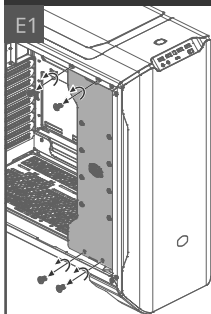      


7. HDD INSTALLATION

 
1

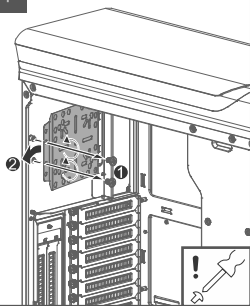


2

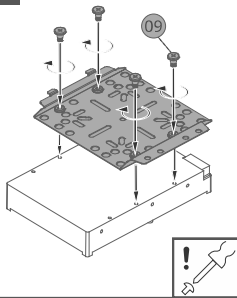 


3A

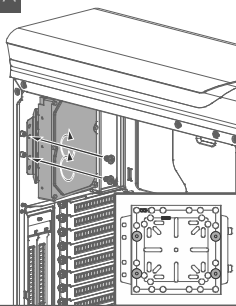 


3B

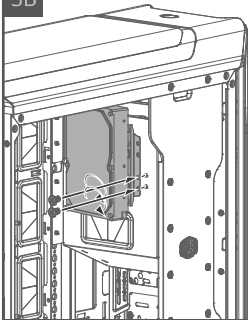 


3C

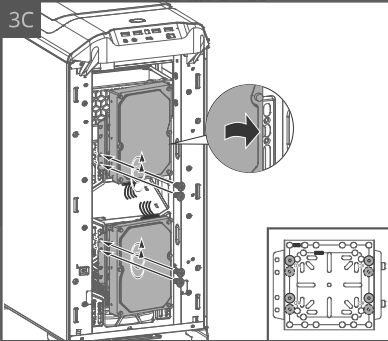 


3D

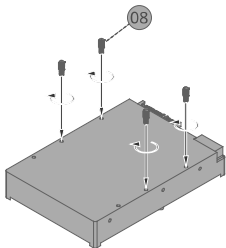 

4D

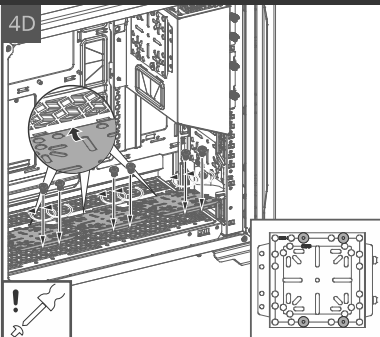 

5D

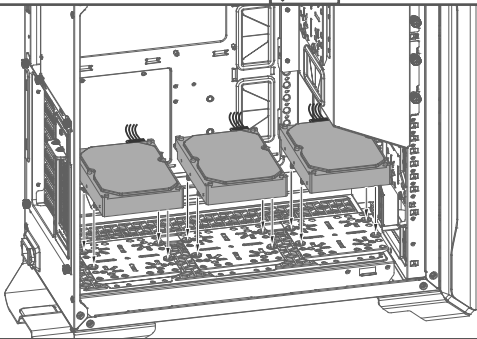 


8. BOTTOM FAN / RADIATOR INSTALLATION


A. Fan

B. Radiator

 
1

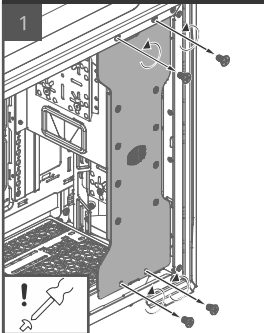


2

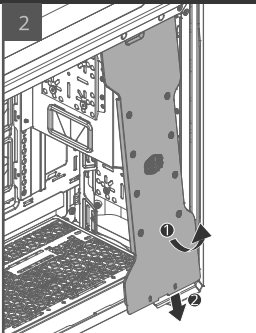 


3

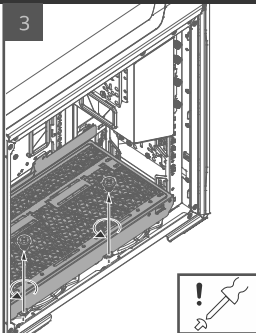 

4

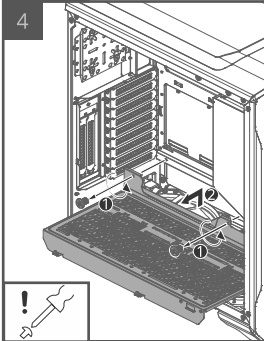 


5A

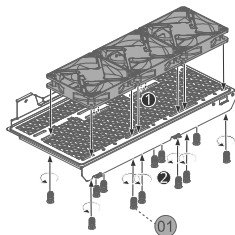 


5B

 
*use supplied screws that come with the radiator.

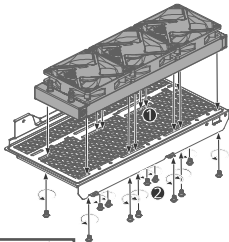


6

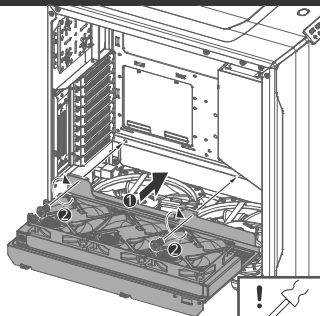 


7

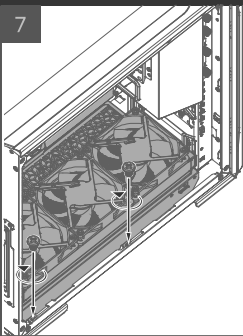 

8

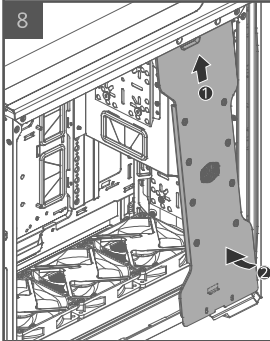 


9

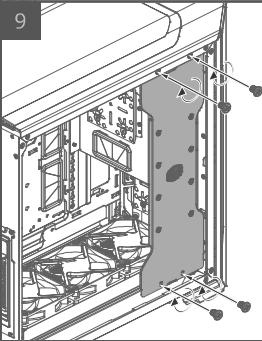 


9. TOP FAN INSTALLATION

A. 200mm Fan B. 120/140mm Fan

 
1

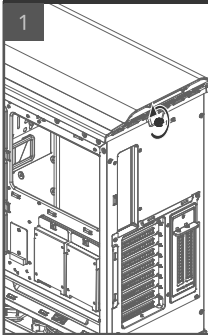


2

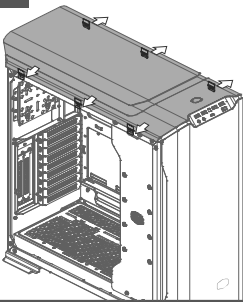 


3

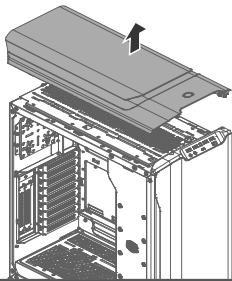 


4A

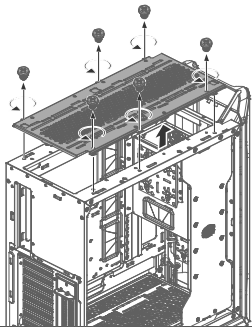 


5A

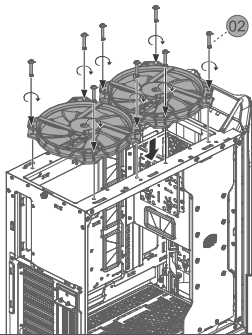 


4B

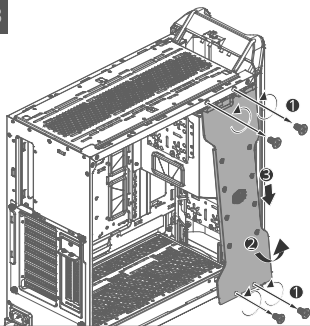 


5B

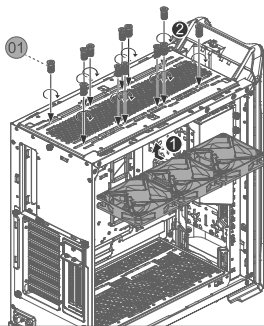 







6

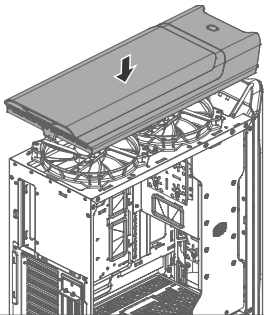 


7

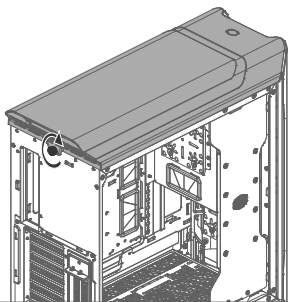 

      
10. TOP RADIATOR INSTALLATION

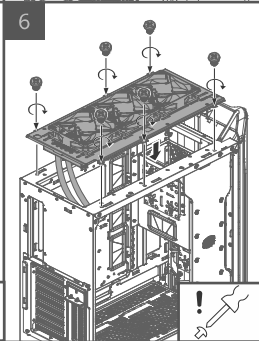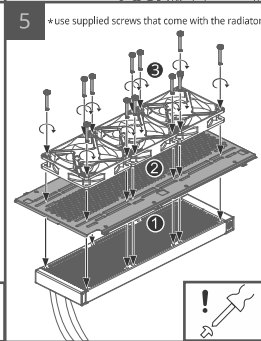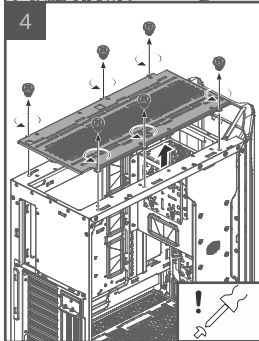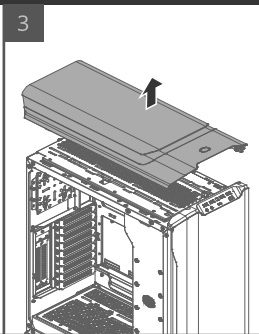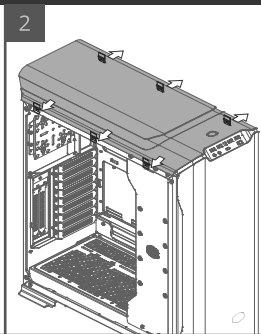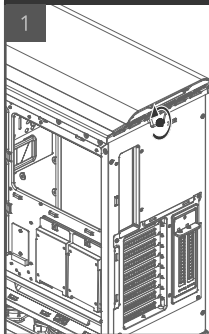

7

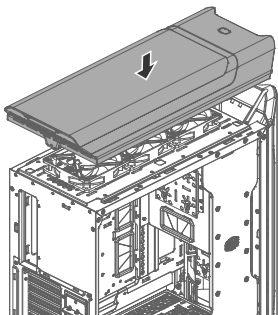 


8

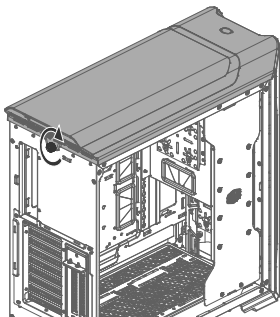 


11. PUMP INSTALLATION

 
1

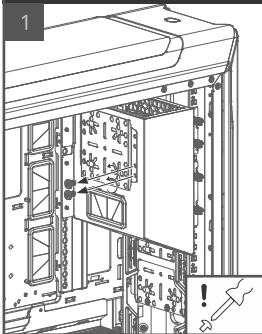


2

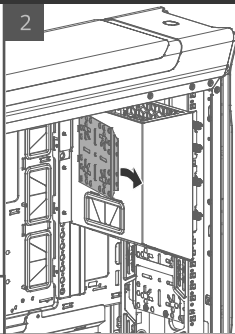 


3A

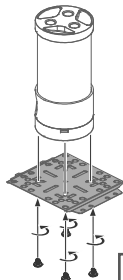 

4A

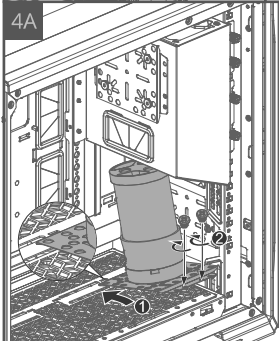 


5A

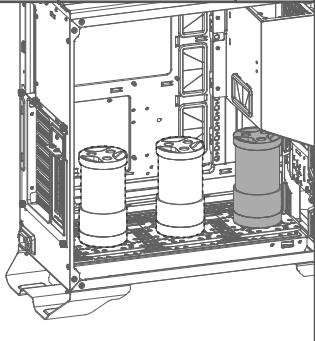 


3B

 
For custom watercooling

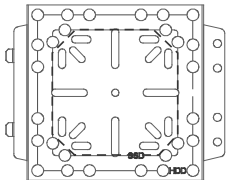


4B

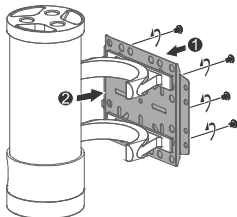 

5Ba

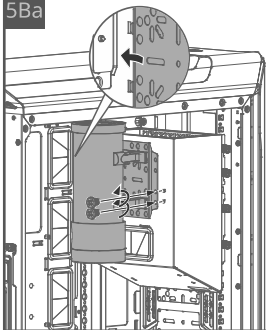 


5Bb

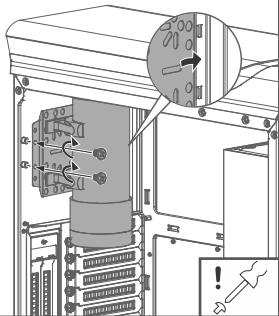 


12. GRAPHICS CARD INSTALLATION

A.Horizontal B. Vertical C. Rotated PCI window

 
A1

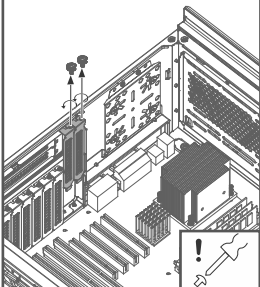


A2

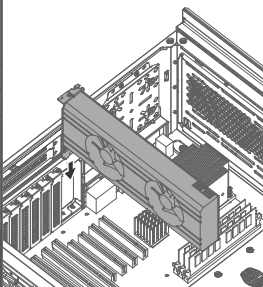 


A3

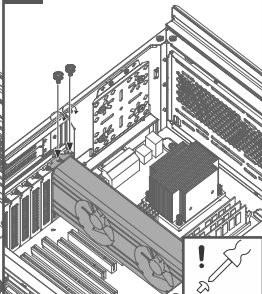 


B1 *Requires riser cable (not included)

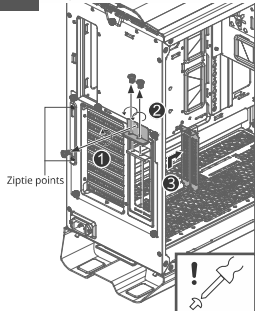 


B2

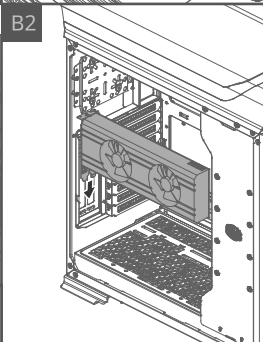 


B3

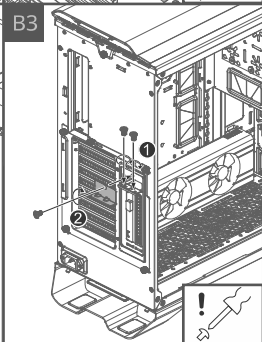 


C1 *Requires riser cable(not included)

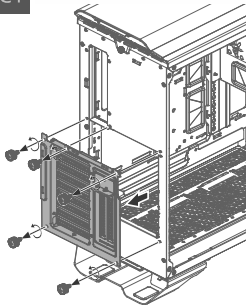 


C2

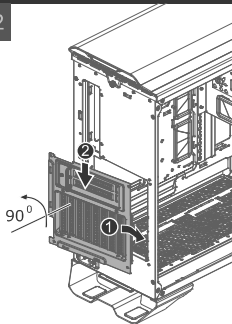 


C3

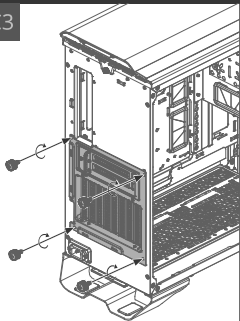 

C4

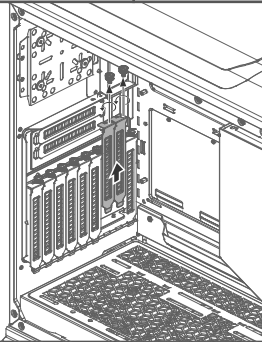 


C5

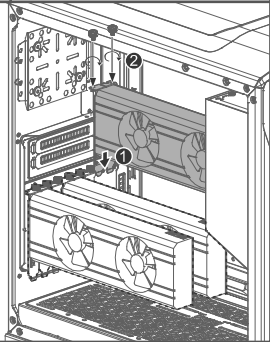 


13. TOP PANEL ADJUSTMENT

 
A1

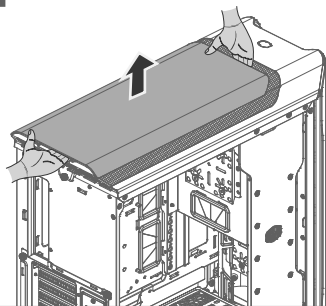


A2

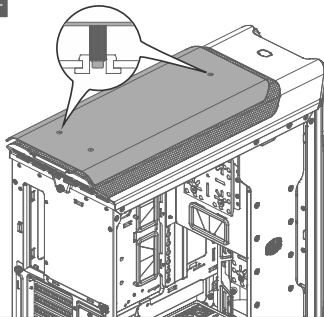 


B1

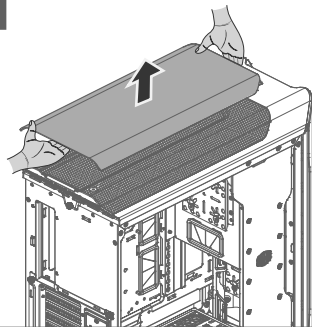 

B2

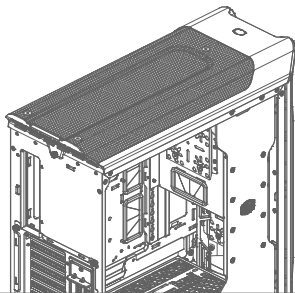 

 14. CONTROL BOARD LAYOUT & FAN CONNECTION

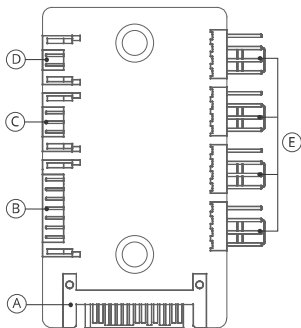

	Connector Name	Description
A	SATA connector	SATA 15pin 12V & 5V input
B	Front panel control connector	Connects to IO panel
C	USB connector	USB connector used for connecting to Motherboard USB2.0 port for firmware update
D	M/B FAN sync connector	Connect to motherboard FAN port Set fan slider to # Sync
E	Fan connector	FAN1-FAN4 4pin PWM FAN connector (compatible with 3pin FAN*). Max output 2A per connector**

*No fan speed control for 3 pin.

** The maximum output of all fan connectors is 3A.

English (EN)

1. Package content
2. Front I/O & Buttons
3. Compatibility
4. Motherboard installation
5. Power supply installation
6. SSD installation
7. HDD installation
8. Bottom fan / radiator installation
9. Top fan installation
10. Top radiator installation
11. Pump installation
12. Graphics card installation
13. Top panel adjustment
14. Control board layout & fan connection

Deutsch (DE)

1. Verpackungsinhalt
2. Front I/O Tasten
3. Kompatibilität
4. Mainboardmontage
5. Netzteilmontage
6. SSD Montage
7. HDD Montage
8. Lüfter/Radiator Montage Boden
9. Lüftermontage oben
10. Radiatormontage oben
11. Pumpenmontage
12. Grafikkartenmontage
13. Anpassung des Top-Panels
14. Controller-Layout & Lüfter-Anschlüsse

Русский (RU)

1. Содержание упаковки
2. Фронтальные кнопки ввода/вывода
3. Совместимость
4. Установка материнской платы
5. Установка блока питания
6. Установка SSD
7. Установка жесткого диска
8. Установка вентилятора/радиатора внизу
9. Установка вентилятора сверху
10. Установка радиатора сверху
11. Установка насоса
12. Установка видеокарты
13. Настройка верхней панели
14. Панель управления и подключение вентилятора

日本語 (JA)

1. パッケージ内容
2. フロントI/O & ボタン
3. 適応性
4. マザーボードインストール
5. 電源ユニットインストール
6. SSDインストール
7. HDD インストール
8. ボトムファン/ラジエーターインストール
9. トップファンインストール
10. トップラジエーターインストール
11. ポンプインストール
12. グラフィックスカードインストール
13. トップパネル調節
14. コントロールボードレイアウト & ファン接続

Español (ES)

1. Contenido del paquete
2. E/S frontales y botones
3. Compatibilidad
4. Instalación de la placa base
5. Instalación de la fuente de alimentación
6. Instalación de SSD
7. Instalación de HDD
8. Instalación del ventilador inferior / radiador
9. Instalación superior del ventilador
10. Instalación superior del radiador
11. Instalación de la bomba
12. Instalación de la tarjeta gráfica
13. Ajuste del panel superior
14. Distribución de la placa de control y conexión del ventilador

Français (FR)

1. Contenu de l'emballage
2. Boutons & E/S en façade
3. Compatibilité
4. Installation de la carte mère
5. Installation du bloc d'alimentation
6. Installation d'un SSD
7. Installation d'un disque dur
8. Installation d'un ventilateur / radiateur en zone inférieure
9. Installation d'un ventilateur en zone supérieure
10. Installation d'un radiateur en zone supérieure
11. Installation d'une pompe
12. Installation d'une carte graphique
13. Réglage du panneau supérieur
14. Connexion des ventilateurs et du circuit de contrôle

Български (BG)

1. Съдържание
2. Преден панел: Бутони и изходи
3. Съвместимост
4. Монтаж на дънна платка
5. Монтаж на захранващ блок
6. Монтаж на SSD
7. Монтаж на твърд диск
8. Монтаж на вентилатор/радиатор долен панел
9. Монтаж на вентилатор на горен панел
10. Монтаж на радиатор на горен панел
11. Монтиране на помпа
12. Монтаж на Графична карта
13. Регулиране на горния панел
14. Схема за свързване на предния панел

Čeština (CS)

1. Obsah balení
2. Přední I/O & tlačítka
3. Kompatibilita
4. Instalace základní desky
5. Instalace napájecího zdroje
6. Instalace SSD disku
7. Instalace HDD disku
8. Instalace dolního ventilátoru/chladiče
9. Instalace horního ventilátoru
10. Instalace horního chladiče
11. Instalace čerpadla
12. Instalace grafické karty
13. Nastavení horního panelu
14. Rozvržení ovládací desky & připojení ventilátoru

Italiano (IT)

1. Contenuto della confezione
2. Pulsanti e I/O frontali
3. Compatibilità
4. Installazione della scheda madre
5. Installazione Alimentatore
6. Installazione SSD
7. Installazione HDD
8. Installazione Ventola Inferiore / Radiatore
9. Installazione Ventola Superiore
10. Installazione Radiatore Superiore
11. Installazione Pompa
12. Installazione Scheda Grafica
13. Regolazione pannello superiore
14. Layout scheda di controllo e connessione ventola

Polски (PL)

1. Szczegółowa zawartość paczki
2. PPanel I/O na froncie
3. Kompatybilność
4. Montaż płyty głównej
5. Montaż zasilacza
6. Montaż dysku SSD
7. Montaż dysku HDD
8. Montaż dolnego wentylatora/chłodzenia
9. Montaż górnego wentylatora
10. Montaż górnego chłodzenia
11. Montaż pompy
12. Montaż karty graficznej
13. Regulacja górnego panelu
14. Interfejs płyty sterującej i podłączenia wentylatora

繁體中文(ZHT)

1. 包裝內含物品明細
2. 前面板接口及按鍵說明
3. 相容性
4. 主機板安裝指南
5. 電源供應器安裝指南
6. SSD安裝指南
7. HDD安裝指南
8. 下方風扇/水冷排安裝指南
9. 上方風扇安裝指南
10. 上方水冷排安裝指南
11. 幫浦安裝指南
12. 顯示卡安裝指南
13. 上面板調整
14. 控制板接口和風扇連接指南

簡體中文(ZHS)

1. 包裝內含物品清單
2. 前面板接口及按鍵說明
3. 兼容性
4. 主板安裝指南
5. 電源安裝指南
6. SSD安裝指南
7. HDD安裝指南
8. 下方風扇/水冷排安裝指南
9. 上方風扇安裝指南
10. 上方水冷排安裝指南
11. 水泵安裝指南
12. 顯卡安裝指南
13. 上面板調整
14. 控制板接口和風扇連接指南

Ελληνικά (EL)

1. Περιεχόμενα συσκευασίας
2. Εμπρόσθιο I/O & διακόπτες
3. Συμβατότητα
4. Εγκατάσταση μητρικής κάρτας
5. Εγκατάσταση τροφοδοτικού
6. Εγκατάσταση SSD
7. Εγκατάσταση HDD
8. Εγκατάσταση κάτω ανεμιστήρα / ψυγείου
9. Εγκατάσταση πάνω ανεμιστήρα
10. Εγκατάσταση πάνω ψυγείου
11. Εγκατάσταση αντλίας
12. Εγκατάσταση κάρτας γραφικών
13. Ρύθμιση πάνω panel
14. Διάταξη control board & σύνδεση ανεμιστήρα

Magyar (HU)

1. A Csomag Tartalma
2. Előlap I/O Gombok
3. Kompatibilitás
4. Alaplap Beszerelése
5. Tápegység Beszerelése
6. SSD Telepítése
7. HDD Telepítése
8. Alsó Ventilátor / Radiátor Telepítése
9. Felső Ventilátor Telepítése
10. Felső Radiátor Telepítése
11. Szivattyú Telepítése
12. Grafikus Kártya Telepítése
13. Felső Panel Állítása
14. Vezérlő Lap Kiosztás & Ventilátor Csatlakozás

Nederlands (NL)

1. Inbegrepen
2. Voorpaneel & Knoppen
3. Compatibiliteit
4. Moederbord Installatie
5. Voeding Installatie
6. SSD Installatie
7. HDD Installatie
8. Ventilator onder / Radiator Installatie
9. Ventilator Boven Installatie
10. Radiator Boven Installatie
11. Pomp Installatie
12. Grafische Kaart Installatie
13. Top Paneel verstellen
14. Controller Lay-out & Ventilator aansluiting

Português (PT)

1. Conteúdo da Embalagem
2. Painel I/O e Botões Frontais
3. Compatibilidade
4. Instalação da Motherboard
5. Instalação da Fonte de Alimentação
6. Instalação do SSD
7. Instalação do Disco Rígido
8. Ventoinha do Fundo / Instalação do Radiador
9. Instalação da Ventoinha no Topo
10. Instalação do Radiador no Topo
11. Instalação da Bomba
12. Instalação da Placa Gráfica
13. Ajustamento do Painel no Topo
14. Layout do Controlo da Board e Conexão das Ventoinhas

Srpski (SR)

1. Sadržaj Paketa
2. Prednji I/O Tasteri
3. Kompatibilnost
4. Instalacija matične ploče
5. Instalacija napajanja
6. Instalacija SSD
7. Instalacija HDD
8. Instalacija radijatora i ventilatora u dnu kućišta
9. Instalacija ventilatora u vrhu kućišta
10. Instalacija radijatora u vrhu kućišta
11. Instalacija pumpe
12. Instalacija grafičke karte
13. Podešavanje gornjeg panela
14. Šema kontrolne ploče & konektori ventilatora

Türkçe (TR)

1. Paket İçeriği
2. I/O Panel & Butonlar
3. Uyumluluk
4. Anakart Montajı
5. Power Supply Montajı
6. SSD Montajı
7. HDD Montajı
8. Alt Panel Fan/Radyatör Montajı
9. Üst Panel Fan Montajı
10. Üst Panel Radyatör Montajı
11. Pompa Montajı
12. Grafik Kartı Montajı
13. Üst Panel Ayarı
14. Kontrol Kart Düzeni ve Fan Bağlantısı

한국어 (KO)

1. 패키지 내용
2. 전면 I/O & 버튼
3. 호환성
4. 마더보드 설치
5. 파워서플라이 설치
6. SSD 설치
7. HDD 설치
8. 하부 팬/라디에이터 설치
9. 상단 팬 설치
10. 상단 라디에이터 설치
11. 펌프 설치
12. 그래픽 카드 설치
13. 제어반 배치 및 팬 연결
14. 상단 패널 조정

Bahasa Indonesia (ID)

1. Isi kemasan
2. I/O depan dan tombol-tombol
3. Kecocokan
4. Cara pemasangan motherboard
5. Cara pemasangan power supply
6. Cara pemasangan SSD
7. Cara pemasangan HDD
8. Kipas bagian bawah / cara pemasangan radiator
9. Cara pemasangan kipas bagian atas
10. Cara pemasangan radiator bagian atas
11. Cara pemasangan pompa
12. Cara pemasangan! kartu grafis
13. Pengaturan panel atas
14. Tampilan papan kontrol dan koneksi kipas

(AR) عربي

(FA) فارسی

1. الصندوق محتويات
 2. الأضرار و الأمامية المداخل لوحة
 3. التوافقية
 4. الرئيسية اللوحة تركيب
 5. الطاقة مزود تركيب
 6. SSD التخزين أقرص تركيب
 7. HDD التخزين أقرص تركيب
 8. بالاسفل المراوح و التبريد شبكة تركيب
 9. بالأعلى المروحة تركيب
 10. بالأعلى التبريد شبكة تركيب
 11. المضخة تركيب
 12. الرسومية البطاقة تركيب
 13. العلوية اللوحة تعديل
 14. المراوح توصيلات و التحكم لوحة تركيب
1. بسته اتی محتویات
 2. ها دکمه و جلو یها ی خروج و یورود
 3. ی سازگار
 4. مادر بورد نصب
 5. هی تغذ منیع نصب
 6. SSD نصب
 7. HDD نصب
 8. نی یا قسمت در اتوری راد/فن نصب
 9. بالا قسمت در فن نصب
 10. بالا قسمت در اتوری راد نصب
 11. پمپ نصب
 12. کی گراف کارت نصب
 13. بی بالا پنل می تنظیم
 14. فن اتصالات و بورد کنترل نما

WARRANTY INFORMATION

This personal computer case is compliant to safety standards. For the declaration of conformity please visit www.coolermaster.com/service/doc

English (EN)

Cooler Master guarantees that this device is free of defect in material and workmanship, and provides a two-year limited hardware warranty for the device commencing from the date of purchase. Please keep your receipt for proof of purchase.

This product is designed for computer usage only. Using this device in any other capacity voids the warranty. If you are not familiar with computer hardware installation, please ask for professional assistance.

The warranty offered covers normal use. Defect or damage that result from improper operation, storage, misuse or abuse, accident or neglect, which are not the fault of Cooler Master, are excluded from warranty coverage.

Note: the warranty is voided by removal or alternation of product or parts identification labels.

*All OEM/bulk packaging product come with one year limited warranty

*In case of conflict between the warranty provided by the country of point of sale and this manual, the warranty of the actual country of point of sale shall be the prevailing document.

*In case of malfunction of electronic components or need of accessories purchase during the warranty period, please return to the original store of purchase.

Türkçe (TR)

Cooler Master bu cihazda malzeme ve işçilik hatası bulunmadığını garanti eder ve cihaz için satın alma tarihinden başlayan iki yıllık sınırlı bir donanım garantisi verir. Alımı belgelemek için lütfen makbuzunuzu saklayın.

Bu ürün yalnızca bilgisayar kullanımı için tasarlanmıştır. Bu cihazın başka bir kapsamda kullanılması garantiyi geçersiz kılar. Bilgisayar donanımı montajını bilmiyorsanız, lütfen profesyonel yardım talep edin.

Verilen garanti normal kullanım içindir. Cooler Master'ın hatası olmayan uygunsuz kullanım, depolama, yanlış kullanım veya kötü kullanım, kaza ya da ihmalen kaynaklanan arıza ya da hasarlar garanti kapsamının dışındadır.

Dikkat: Ürün ya da parça tanıma etiketlerinin sökülmesi ya da değiştirilmesi garantiyi geçersiz kılar.

* Tüm OEM/ambalajsız ürünler bir yıl sınırlı garanti ile gelir

* Garanti verilen ülkedeki satış noktası ve bu kullanma kılavuzu arasında bir çelişki olursa, satış noktasının bulunduğu ülkedeki garanti hükümleri öncelik taşır.

* Elektronik bileşenlerin arızalanması ya da garanti süresinde aksesuarların satın alınması gerekirse, lütfen ürünü satın aldığınız mağazaya başvurunuz.

简体中文 (ZHS)

Cooler Master 保证本设备之材质及功能无瑕疵，并提供本设备二年之硬件有限保固服务，自购买日算起。请把您的收据放在安全之处，以免 Cooler Master 要求您提供本证明。本产品专为计算机设计。一旦将本设备用于其它用途，则保固无效。若您不熟悉硬件安装程序，请寻求专家之协助。保固服务仅适用于正常使用下之故障情形。若本公司发现设备毁损之原因为滥用、改造、误用、疏忽、电压供应错误、空气及水污染意外和自然灾害，则保固无效。

注意：重贴或条形码遭毁损而无法辨识保固期限者，则不在此限。

- *所有OEM及工业包装的产品皆保固一年。
- *如果销售国家所提供的保固与本说明互有冲突时，应以实际销售国家之保固为准。
- *保固期内遇有电子零件故障或配件购买需求，请洽原购买商店。

繁體中文 (ZHT)

Cooler Master 保證本設備之材質及做工無瑕疵，並提供本設備二年之硬體有限保固服務，自購買日算起。請把您的收據放在安全之處，以免 Cooler Master 要求您提供本證明。本產品專為電腦設計。一旦將本設備用於其他用途，則保固無效。若您不熟悉硬體安裝程式，請尋求專家之協助。保固服務僅適用於正常使用下之故障情形。若本公司發現設備毀損之原因為濫用、改造、誤用、疏忽、電壓供應錯誤、空氣及水污染意外和自然災害，則保固無效。

注意：重貼或條碼遭毀損而無法辨識保固期限者，則不在此限。

- *所有OEM及工業包裝的產品皆保固一年。
- *如果銷售國家所提供的保固與本說明互有衝突時，應以實際銷售國家之保固為準。
- *保固期內遇有電子零件故障或配件購買需求，請洽原購買商店。

部件名称	有毒有害物质或元素					
	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 [Cr(VI)]	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
机箱组	×	○	○	○	○	○
面板组	×	○	○	○	○	○
I/O模组	×	○	○	○	○	○
风扇	×	○	○	○	○	○
零件包	×	○	○	○	○	○
电源	×	○	○	○	○	○

本表格依据SJ/T 11364的规定编制。

○：表示该有害物质在该部件所有均质材料中的含量均在GB/T 26572规定的限量要求以下。

×：表示该有害物质至少在该部件的某一均质材料中的含量超出GB/T 26572规定的限量要求。

Note: The form is only applied to China law.

Cooler Master Products: Limited Warranty

This document describes the warranty terms for all Cooler Master product sold in Australia

For Australia only:

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. (Cooler Master Technology Inc., 8F., No. 788-1, Zhongzheng Rd., Zhonghe Dist., New Taipei City 23586, Taiwan (R.O.C.).)

Telephone: +886-2-2225-3517 (standard international call charges apply.)

Who the Warranty Protects:

This Warranty is valid to the original purchaser only.

What the warranty protects:

This warranty is valid only for the Cooler Master Products distributed by authorized dealer(s) in Australia. Please contact Cooler Master for warranty information and services:

- Cooler Master Support: account.coolermaster.com

What Is and Is Not Covered

It is important to note that our warranty is not an unconditional guarantee for the duration of the Program. Any replaced parts become the property of Cooler Master. The Program does not apply to the software component of a product or a product which has been damaged due to accident, misuse, abuse, improper installation, usage not in accordance with product specifications and instructions, natural or personal disaster, or unauthorized alterations, repairs or modifications.

The Program does not cover any events such as below:

- Any damages unrelated to manufacturing defects.
 - Any unsuitable environment or use of the product in Cooler Master Opinion.
 - Any product which has been modified without official permission from Cooler Master, or on which the serial number or warranty sticker has been defaced, modified, or removed.
- Damage, deterioration or malfunction resulting from:
- Accident, abuse, misuse, neglect, fire, water, lightning, or other acts of nature, commercial or industrial use, unauthorized product modification or failure to follow instructions included with the product.
 - Third party products using Cooler Master Components will not be covered by warranty. See your vendor or the manufacturer for information about servicing.
 - Repair or attempted repair by anyone not authorized by Cooler Master, Inc.
 - Any shipment damages (claims must be made with the carrier).
 - Unauthorized repairs to a Cooler Master product will void the warranty offered by the Program. Cooler Master reserves the right to refuse to service any product which has been altered, modified or repaired by non-Cooler Master Service personnel.
 - Cooler Master does not warrant that this product will meet your requirements. It is your responsibility to determine the suitability of this product for your purpose.
 - Removal or installation charges.
 - You are responsible for the cost of shipping the product to Cooler Master. Cooler Master pays the cost of returning a product to you.
 - Cooler Master reserves the right to replace the product with a service product at their sole discretion at any time.
 - Product malfunction or damage resulting from liquids or moisture.
 - All accessories that malfunction due to physical damage such as: USB cables, extension cables, adapter cables, adapters, power cords, screws, retention brackets, ear cups, and all other similar accessories.

Limitation of implied warranties:

THERE ARE NO WARRANTIES, EXPRESS OR IMPLIED, WHICH EXTEND BEYOND THE DESCRIPTION CONTAINED HEREIN INCLUDING THE IMPLIED WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.

Exclusion of damages

COOLER MASTER'S LIABILITY IS LIMITED TO THE COST OF REPAIR OR REPLACEMENT OF THE PRODUCT. COOLER MASTER SHALL NOT BE LIABLE FOR:

- DAMAGE TO OTHER PROPERTY CAUSED BY ANY DEFECT IN THE PRODUCT, DAMAGES BASED UPON INCONVENIENCE, LOSS OF USE OF THE PRODUCT, LOSS OF TIME, LOSS OF PROFITS, LOSS OF BUSINESS OPPORTUNITY, LOSS OF GOODWILL, INTERFERENCE WITH BUSINESS RELATIONSHIPS OR OTHER COMMERCIAL LOSS, EVEN IF ADVISED OF THEIR POSSIBILITY OF SUCH DAMAGES.
- ANY OTHER DAMAGES, WHETHER INCIDENTAL, CONSEQUENTIAL OR OTHERWISE
- ANY CLAIM AGAINST THE CUSTOMER BY ANY OTHER PARTY

Warranty Information:

If the goods is found with reasonable defect within the period of (refer to Table A,) starting on the first day of purchase (with proof of invoice), this is what you must do, to claim the warranty from the above address.

Procedures:

1. Consumers should return to the shop where he/she has bought the goods, After confirming with the shop with a valid invoice, they may approach the distributor for RMA claim.
2. After confirmed by the distributor that the goods was damaged due to natural causes, replacement and repair will be done by distributor (including brand new or refurbished goods)
3. All faulty goods must return to the distributor, expenses for returning the faulty goods will be covered by the consumer, and distributor will cover the cost involved in the transporting of parts or repaired goods to the consumer.

Regarding all the expenses incurred in making the claim, and this is how you would claim:

1. Within the valid warranty date, starting from the first day of issuing invoice, Retail shops will assist in confirmation with distributor for the consumer for the following.
 - A. If the damage was caused by the consumer, then the consumer should cover all expenses in fixing the product, if the product still can't be fixed, we would suggest consumer in buying a brand new product.
 - B. Product defect caused under natural use, expenses will be covered by the distributor.
2. Faulty products with expired warranty dates, we would suggest consumer to purchase a brand new products, without undergoing for repairs.

Table A:

Cooler Master Products

Please check your user manual for the exact warranty period terms for products that are not shown below.

For more warranty information, please visit our official website: <http://www.coolermaster.com/service/warranty.html>

Chassis

Product Name	Warranty Term
All Chassis Series (Only Electronic Parts)	2 year
C+P (Chassis + PSU)	1 year

(EN) Limited warranty period: <http://www.coolermaster.com/service/warranty.html>
(AR) المحدود الضمان فترة : <http://www.coolermaster.com/service/warranty.html>
(BG) Период на ограничена гаранция: <http://www.coolermaster.com/service/warranty.html>
(CS) Období omezené záruky: <http://www.coolermaster.com/service/warranty.html>
(DA) Begrænset garanti: <http://www.coolermaster.com/service/warranty.html>
(DE) Beschränkter Garantiezeitraum: <http://www.coolermaster.com/service/warranty.html>
(EL) Περίοδος περιορισμένης εγγύησης: <http://www.coolermaster.com/service/warranty.html>
(ES) Periodo de garantía limitada: <http://www.coolermaster.com/service/warranty.html>
(FA) مدت زمان گارانتی : <http://www.coolermaster.com/service/warranty.html>
(FI) Rajoitettu takuujakso: <http://www.coolermaster.com/service/warranty.html>
(FR) Période de garantie limitée: <http://www.coolermaster.com/service/warranty.html>
(HU) Korlátozott jótállási időszak: <http://www.coolermaster.com/service/warranty.html>
(HR) Razdoblje ograničenog jamstva: <http://www.coolermaster.com/service/warranty.html>
(ID) Masa garansi terbatas: <http://www.coolermaster.com/service/warranty.html>
(IT) Periodo di garanzia limitata: <http://www.coolermaster.com/service/warranty.html>
(JA) 限定保証期間 : <http://www.coolermaster.com/service/warranty.html>
(KO) 제한 보증 기간 : <http://www.coolermaster.com/service/warranty.html>
(KK) Кеңілдік мерзімі: <http://www.coolermaster.com/service/warranty.html>
(NL) Beperkte garantieperiode: <http://www.coolermaster.com/service/warranty.html>
(NO) Garantiperiode, begrenset garanti: <http://www.coolermaster.com/service/warranty.html>
(PL) Okres ograniczonej gwarancji: <http://www.coolermaster.com/service/warranty.html>
(PT) Período de garantia limitada: <http://www.coolermaster.com/service/warranty.html>
(RU) Ограниченный гарантийный срок: <http://www.coolermaster.com/service/warranty.html>
(SR) Period ograničene garancije: <http://www.coolermaster.com/service/warranty.html>
(SV) Begränsad garantiperiod: <http://www.coolermaster.com/service/warranty.html>
(TR) Sınırlı garanti süresi: <http://www.coolermaster.com/service/warranty.html>
(UK) Обмежений гарантійний термін: <http://www.coolermaster.com/service/warranty.html>
(ZHT) 有限保固期間 : <http://www.coolermaster.com/service/warranty.html>



Make It Yours.

Asia Pacific - Cooler Master Technology Inc.
8F., No. 788-1, Zhongzheng Rd., Zhonghe Dist.,
New Taipei City 23586, Taiwan (R.O.C.).
Tel: +886-2-2225-3517

China - Cooler Master China
Room 2062, Floor 6, No. 421, Weiqing Rd.,
Jinshan District, Shanghai City, China
Tel: +86-21-51872177

Europe - Cooler Master Europe B.V.
Lodewijkstraat 1b, 5652AC Eindhoven, The Netherlands
Tel: +31-(0)40-702-0900

North America - Cooler Master NA
2929 E Imperial Hwy Ste #110, Brea, CA 92821, USA
Tel: +1-888-624-5099

South America
Email: Soporte_Latam@coolermaster.com.tw




Product Page

coolermaster.com/qr/mastercase-sl600m



Technical Support

account.coolermaster.com

512001920-GP Ver 1.0: 2018/09 

The color and specification are subject to be changed without further notification.
Please visit our website for updated information: www.coolermaster.com

©2018 Cooler Master Technology Inc. All Rights Reserved. All trademarks are registered to their respective owners.